


TalkMaster and Intercoms On the Same Network Segment

To configure Digital Acoustics Intercoms for use with TalkMaster on a single network segment, follow this procedure:

- Install the TalkMaster Software
- Start TalkMaster
- Select menu option “Help → Check for new versions online” to make sure you are running the latest version of the software
- Select menu option “Tools → Configure Intercoms”
- Enter your password (default is admin) and the Intercom Configuration Tool will open
- The intercoms will appear in the list

Location Name	Icom ID	IP Address	Details
	1036E9	0.0.0.0	No IP addr

- The Icom ID that is reported corresponds to the ID# on the label of the bottom of an Intercom
- Click on the intercom you want to configure.
- Check the box “Assign IP automatically with DHCP” or uncheck it to type in the IP address, Subnet and Gateway address that you want to assign to the Intercom. You do not have to alter the Port
- Assign a “Location Name” to the Intercom (this will be written to the unit and will be displayed on the main TalkMaster display)
- Check the box “Assign this PC address as client’s server” or uncheck the box and type in the Server IP address of the PC that this Intercom will connect to
- Click the Apply button
- Click OK on the confirmation dialog
- Select the next intercom and repeat this process until all Intercoms are configured

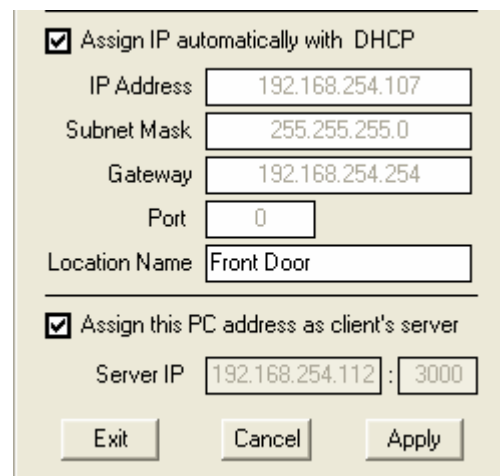

The screenshot shows a configuration dialog box with the following fields and options:

- Assign IP automatically with DHCP
- IP Address: 192.168.254.107
- Subnet Mask: 255.255.255.0
- Gateway: 192.168.254.254
- Port: 0
- Location Name: Front Door
- Assign this PC address as client's server
- Server IP: 192.168.254.112 : 3000
- Buttons: Exit, Cancel, Apply

- Click on the Search button
- Verify that all of your Intercoms have been configured correctly
- Click Exit
- The Intercoms will now appear in the main TalkMaster display

Grp	Location	Status	Address	Door/Gate	Notes
<input type="checkbox"/>	Front Door	Connected	192.168.254.107		

Auto Response
 Unattended

Audio Archive
 Capture

Listen mode
 Automatic
 Manual

Talk Mode
 Selected
 Group
 All Active

Play File
Chime
Talk

Listen

192.168.254.112 Speaker on Mic off